


## 4. Off Mode

Off mode is to be used when you do not want the zone to heat up for a length of time, such as over the Summer or if you are going on holiday.

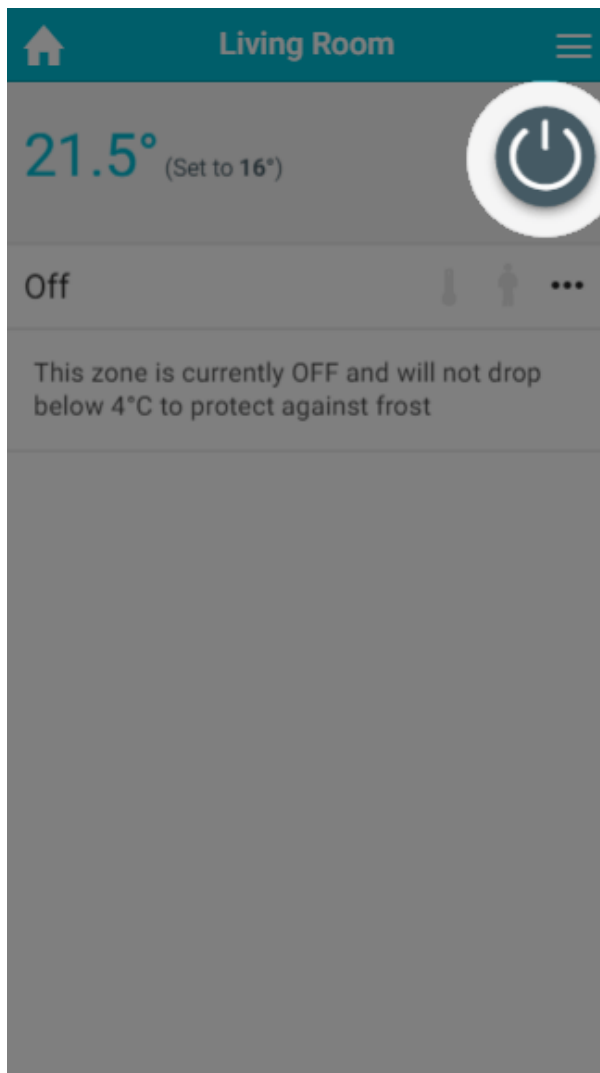

Off mode works slightly differently, depending on what type of zone is being controlled:

- **Heating:** Radiator zones in Off mode will not call for heat unless the measured temperature drops below 4°C. This is explained in the on-screen message when you enter Off mode.
- **On/off** type: The zone will stay turned off, and not try to heat unless changed into timer/override mode.

When you swap to off mode, your Timer mode schedules will be kept saved in the background for when you swap back to this mode at a later date.